


Easy to Set Up & Use

Alexa Plays Nice with the Hopper or Wally

Amazon Alexa connects with your DISH receiver to allow you to control your TV just using your voice. Connecting couldn't be easier! Just follow the 3-step process below to get started.

Requires internet-connected Hopper® or Wally™ and Amazon Echo, Echo Dot, or Amazon Tap. Alexa, Echo, Echo Dot, Amazon Tap, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Go to www.amazon.com/dishdotoffer and enter the Amazon Offer Code: _____

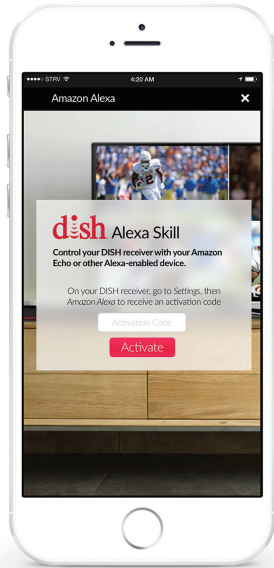

Before You Begin

- Before pairing your Echo Dot with DISH receiver, follow the instructions included with your Echo Dot device. The instructions below will support you to pair your Echo Dot with DISH.
- To get started, download the Amazon Alexa App.



For issues with Amazon Echo Dot (like connecting to Wi-Fi or if it is having a hard time understanding you) contact Amazon Customer Service.

Step 1

Enable DISH TV in the Alexa App

- Open the Alexa App on your mobile device and select Music, Video, & Books from the side menu
- Select DISH TV from the TV section of the list
- Select Enable on this screen
- Have your DISH account password ready

If you do not remember your DISH account password, visit mydish.com to reset.

Step 2

Pair Your Internet-Connected Receiver with Amazon Alexa

- On your DISH receiver, go to Menu, then Settings, and select Amazon Alexa (note: your receiver must be connected to the internet to pair with Alexa)
- Select Get Code from this screen
- Enter the code generated into the Amazon Alexa mobile app and select Activate

Step 3

Control Your TV Hands-Free

- Try saying things like "Alexa, go to Channel 140," "Alexa, show me Tom Hanks movies," "Alexa, pause," or "Alexa, find America's Got Talent."

